Instruction For Use




UNIVERSAL A/C REMOTE CONTROL

- SETTING OF THE REMOTE CONTROL

Choose one of the setting modes A, B or C.

A) Direct selection of the Brand (only for the main brand)

- 1. Manually plug-in the air conditioner, aim the remote control at the receiving
- Press the code key that corresponds to your brand and hold until the air conditioner is started by giving out a sound signal. Release the key and the setting is completed.

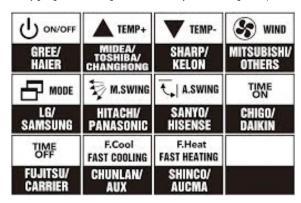

B) Input the code manually

Code list on www.wellclima.com

- Manually plug-in the air conditioner, aim the remote control at the receiving.
- Hold set button for about 4 sec. until the code is flashing in the display.

 Press temperature TEMP + ▲ or TEMP ▼ until it reaches the desired code. If the air conditioner does not turn on advances by another code.
 - The brands and codes list is continually updated and is available on www.wellclima.com. If the codes are separated by a - sign it means all numbers between the first and the last (es LG 600-609 you have to test codes 600, 601, 602, 603.......> 609).
- Press OK button and the selection conditioner type code will stop flashing.
- Test whether the remote control button has been effectively set. If yes setting completed, if no repeat steps 2-3.
 - If none of the codes work with your air conditioner or if your brand is not in the list don't worry, with the automatic search (C) you can find the right code.

C) Digital automatic code search

- 1. Manually plug-in the air conditioner, aim the remote control at the receiving.
- Hold SET button (for about six seconds) until the conditioner type code changes in the window, indicating you have entered the high-speed conditioner type search status. Immediately press OK button to stop searching when the air conditioner automatically
- Test whether the remote control button has been effectively set. If yes setting completes, if no repeat step 2.

RESTORE TO FACTORY SETTING

Press the "SET" + "WIND" button at the same time and hold about 3 seconds to restore the factory settings.

REMOTE CONTROL FUNCTIONS









Fast Cool - Fast Heat button

The air condition will be set to the cooling mode by pressing the "Fast Cool" button, the

The air condition will be set to the cooling mode by pressing the "Fast Cool button, the temperature is 21°C, strong wind, automatic direction.

The air condition will be set to the heating mode by pressing the "Fast Heat" button, the temperature is 27°C, strong wind, automatic direction.

In the mode of Heating press the "E.A. Heating" button to start the electrical heating fun-

ction, it can shorten the heating time. This function is suitabile for some models.

2. Set the clock function

Press CLOCK button for 3 sec. to enter in clock setting mode, the clock will flashing. Use the TEMP + ▲ or TEMP - ▼ buttons to adjust the current time and press CLOCK button again to exit setting.

Timer ON/OFF

To configure the timer function in step of 1h, press TIME ON or TIME OFF buttons, the air conditioner timer lights will go on.

The setting can change depending on the model of your air conditioner. The timed ON function of some of the air conditioner types is only valid in the Power Off status.

Note

This remote control can operate if the air conditioner receiver works well. If you can not turn on the air conditioner and if you still have the old remote do this test: with a digital camera or a smartphone (no iPhone) shot the LED at the top edge of the old remote, by repeatedly pressing the ON / OFF button on the remote control you have to see the LED light up, (not visible to the naked eye) if yes the remote control works, maybe the problem is in the receiver of the indoor unit, please contact the technical service of the conditioner.