



# KT-B03 Remote control for air conditioners

UNIVERSALE  
UNIVERSAL A/C

Dear customer, we thank you for purchasing this product.  
The remote control is compatible with the best brands of air conditioners on the market.  
Read these indications carefully before operating the remote control.

## 1. Preparation of the remote control

- Slide the back cover down and open.

Insert 2 batteries (type AAA), paying attention to the polarity indicated in the battery compartment.

## 2. Programming the remote control

### 2.1 Directly entering the brand:

- Press and hold the **SEL** button until the abbreviation appears in the lower part of the display.
- Select the abbreviation corresponding to your brand using the **+** and **-** buttons (check the corresponding abbreviation on the back of the packaging).
- Press **OK** to confirm the setting.
- If the remote control does not work well, or not all functions are available, point the remote control towards the air conditioner, press and hold the **OK** button until you hear the sound of the air conditioner buzzer. Try the remote control again. If necessary, repeat the operation until the remote control works perfectly.

### 2.2 Automatic search completion:

- Point the remote control towards the air conditioner after selecting the brand on the display, and press and hold the **OK** button. Release the button quickly as soon as you hear the sound of the air conditioner buzzer. Try all the functions. If necessary, repeat the operation until the remote control works perfectly.

### 2.3 General automatic search:

- Point the remote control towards the air conditioner. Press and hold the **SEL** button until the abbreviation appears in the lower part of the display. Press and release the **SEL** button at approximately 1 second intervals until you hear the sound of the air conditioner buzzer. Try the remote control. If not all functions are available, repeat the operation until the remote works perfectly.

## 3. Setting the clock

- Press the **CLOCK** button for 2 seconds. The time on the display will start to flash. Press the **+** and **-** buttons until the right time is displayed. Confirm by pressing **OK**.

## 4. MODE: Operating modes

Press the **MODE** button to set the operating mode, which is shown by a symbol in the upper part of the display. From left to right, the symbols have the following meanings: air recirculation (if this function is available), cool, dehumidify, fan only, heat (with heat pump function).

## 5. FAN: Setting the fan speed

Use the **FAN** button to set the fan to 3 different speeds + an automatic speed (i.e. the air conditioner adjusts the speed automatically to target conditions and temperature).

## 6. SWING: Activates automatic movement of the air direction vanes.

## 7. VANE: Adjust the air direction vanes.

## 8. TIMER OFF programming

With the air conditioner on, a power-off time can be set.

**WARNING!** The time is memorized in the remote control, which, at the set time, will send the **OFF** signal to the air conditioner. It is therefore essential that the remote control remains within range so that the air conditioner can receive the signal.

8.1 **TIMER OFF:** Press the **TIMER OFF** button. The time on the display will start to flash. Press the **+** and **-** buttons until the desired time is displayed. Confirm by pressing **OK**.

