

DOUBLE - MANUAL INSTRUCTION



all languages on www.wellclima.com

SETTING OF THE REMOTE CONTROL

Please insert 2 alkaline batteries 1,5V type AAA and plug-in the Air Conditioner to the electric line. The remote control can be set to 3 different ways described below, it is recommended to use procedure A because it ensures a more precise setting.

A> Direct code storage - recommended choice

- 1. Connected to www.wellclima.com/en/manuals website, click on Brands and Codes List of DOUBLE model, find the brand of your air conditioner and its codes on the right, these are internal codes that do not match the product code and must be tested with your air conditioner. If your brand is not in the list you can send an e-mail to info@wellclima.com
- 2. Press and hold **SET** button, then press **POWER (b**) button and release both buttons, the symbol "---" flashes at the bottom of the screen. Press **TEMP △** or '**TEMP V**'up to the first code found in step 1 appears (you can keep the TEMP keys pressed to scroll the codes faster. If the code is a number between 000 and 500 press the key **△**, otherwise the key **▼**
- 3. Press the **SET** button to exit, check the button functions. If the device respond correctly the setting is finished, if not, please repeat steps 2 and 3 with next set of codes.

LOOK OUT! when you find the sign "-" between two codes you have to try all the numbers between the first and the second one (e.g. LG: 600-609 you have to test codes 600, 601, 602.... up to 609). If none of the codes works or if your brand is not in the list, don't worry, write by sending the information of your air conditioner to info@wellclima.com or try searching from the remote control (B).

B> Code search from the remote control

This operation is not very precise and may require more time, when possible use procedure **A** or contact our assistance if necessary info@wellclima.com

- 1. Aim the remote towards the air conditioner receiver window, press and hold SET button, about 6 seconds later the symbol "---" start to flash at the bottom of the screen, keep holding the button until the air conditioner turns on. Release the key IMMEDIATELY as soon as the beep confirms switching on, it's very important to be quick in this step, otherwise the remote control will continue scanning and switch to another code, different from the working one.
- Check the remote control, if the button functions work well the setting is effective. If not, please repeat steps 1 and 2.
- A complete scan of all codes takes about 30 minutes. Don't stop the search before, or before the air conditioner switches on.

C> Brand point-to-point quick search (for some of the major brands only)

This is a quick and easy setting, available only for the brands listed in table 1

- 1. Aim the remote control towards the air conditioner receiver window
- Press and hold the appropriate code button corresponding to your A/C brand (for example ▲ button for LG and Samsung brand) until the air conditioner turns on and you hear a 'beep' sound; release the button, and the setting is completed.
- 3. Check the button functions. If the buttons work correctly, the code setting is effective. If not, please repeat steps 2 and 3.

Table 1

Direct selection keys by brand

	₽ MODE	GREE. HUALING	E.A.HEAT	FRESTEC. YAIR	∰ F.HEAT	CHIGO. TCL
	禁 F.COOL	MIDEA. CHANGHONG	С	CHUNLAN. AUX	7	HAIER. MITSUBISHI
	Н	HISENSE. KELON	S FAN	DAIKIN. FUJITSU. CARRIER	M.SWING	HITACHI. PANASONIC
	ر A.SWING	SANYO. SHARP	TEMP	LG. SAMSUNG	TEMP	SHINCO. AUCMA
	(J) ON/OFF	ELECTROLUX. SHUANGLU. TOSHIBA				

RESTORE TO FACTORY SETTING

Press and hold **SET** button and then press **FAN** so button and hold them down about 3 seconds to restore the factory settings.

REMOTE CONTROL FUNCTIONS









direction





DISPLAY SIMBOLS













ADDITIONAL FUNCTIONS

1. Control two sets of A/C simultaneously

The remote can control two air conditioners of different brands / models at the same time, no need to switch. Pls follow these steps:

- 1.1 Set the two air conditioners through the above-mentioned A method and remember the correct codes.
- 1.2 Set the two codes founded in Step 1 for the two air conditioners using the A) Direct Code Storage input method. The air conditioners can be set several times, and only the final two codes will be used.
- 1.3. Press and hold **SET** and then **A.SWING** buttons simultaneously. Release the buttons when the screen flashes. The setting is completed and the remote can now control two air conditioners. **Note:** If the **B** or C methods are used to search codes for the air conditioners again, the function to control two units will be automatically cancelled.
- ! We suggest you try the codes for the first A/C and mark the correct one, then find the code for the second air conditioner. When the second A/C works correctly with the **DOUBLE** remote control, enter the manual code of the first one again and complete the setting with step 1.3, the final 2 codes will be used.

2. Temperature range lock (Hotel Energy Saving function)

This function can set the adjustable temperature range for the remote.

- 2.1 Keep pressed **SET** button and then press the **TEMP** ▲ button and hold them for 3 seconds. When **COOL** ★ icon flashes on the screen, the highest temperature can be set.
- 2.2 Press the **TEMP** ▲ or **TEMP** ▼ buttons to adjust the highest temperature, for example, set to 24°C. Press **SET** to exit.
- 2.3 Keep pressed **SET** button and then press **TEMP** ▼ and hold them for 3 seconds. When the **HOT** ★ icon flashes on the screen, the lowest temperature can be set.
- 2.4. Press the TEMP ▲ or TEMP ▼ buttons to adjust the lowest temperature, for example, set to 20°C. Press SET to exit. Now the temperature range the remote can control is set from 20°C-24°C. Cancel the lock:

Keep pressed **SET** button, then **TIME ON** and hold them down. The screen will flash and then turn off. The temperature lock function is now cancelled.

3. Security Lock Function

Lock: Keep pressed SET and then M.SWING ₩ buttons. The screen displays the Lock ♠ icon.
Unlock: Keep pressed SET and then M.SWING ₩ buttons. The Lock ♠ icon disappears.

4. Clock function setting

- 4.1 Keep pressed **SET** and then press **MODE** 🗗 buttons until the hour digits flash.
- 4.2 Press the **TEMP** ▲ (or **TEMP** ▼) button to increase (or decrease) by 1 hour.
- 4.3 Press the **SET** button to complete setting the hour. Now the minute digits flash. Press the **TEMP** ▲ (**TEMP** ▼) button to set the minutes.
- 4.4 After the minutes are set, press the **SET** button to exit clock setting.

5. Timer on/off function

The remote control is equipped with the timer function of the original AC remote. Press the **TIME ON** or **TIME OFF** buttons (one press for one hour), the air conditioner timer light will switch on.

This means that the air conditioner timer function is now operational.

* This function requires the air conditioner to have the timer function, or else this button will not work.

6. Fast cool/heat function

Press the **Fast Cool** * button: The air conditioner will be set to cooling mode: 21°C, strong wind, auto wind direction.

Press the 'Fast Heat \(\frac{\epsilon}{25}\) button: The air conditioner will be set to heating mode: 27°C, strong wind, auto wind direction.

* In the heating mode, press the **E.A.HEAT** find button to start the electrical assistant heating function. Only applicable for certain models.

ANY PROBLEMS?

This remote control is compatible with 99% of the air conditioners on the market and are guaranteed according to the law. **WELLCLIMA** is the only company in this sector that offers direct assistance on its products, if you experience any problems or difficulties in using the remote control, please visit **HELP and FAQs** page on our website wellclima.com or contact us at info@wellclima.com and we will provide our best service for you.

Video tutorials available on wellclima website and on youtube > wellclima double

In compliance with directive 2012/19/EU D.L. N°49/2014 KOOMANDO SRL being the suppliers of this products issues the following information: it is mandatory not to dispose of the RAEE as if they were urban waste, but to carry out a separate collection of them. When delivering the equipment upon purchase of a new one, the same manufacturer shall provida in re-using, recycling it or other forms of recycle through measures implemented and approved bt the public administrations. Such information is supplied in order to prevent potential effects on the environment and human healt due to the presence of dangerous substances in electronic equipments or due to an improper use of the same. Therefore every electronic equipment sold shall subject to this directive and shall be marked with the symbol shown here below.

